



# PCCDLFAT assembling instructions

PCCDLFAT is an accessory designed to extend the Field of view of PCCD optics and inspect objects with even larger diameters (beyond 25mm).


! Make sure to perform this procedure in a clean, non-dusty environment in order to prevent dust or other particles from entering the lens.

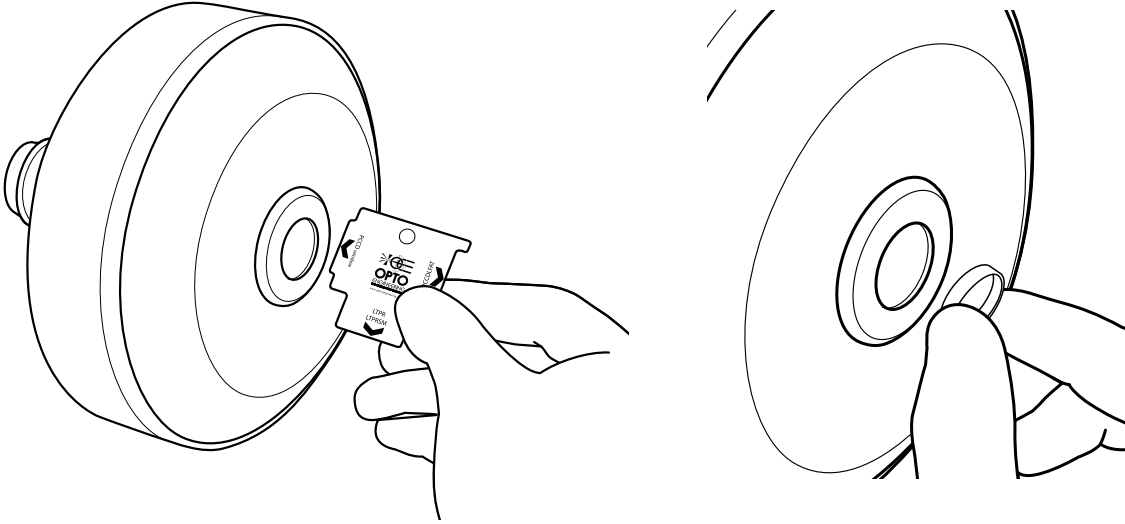

1 Remove the pre-assembled protective window by using the provided PTTOOL.

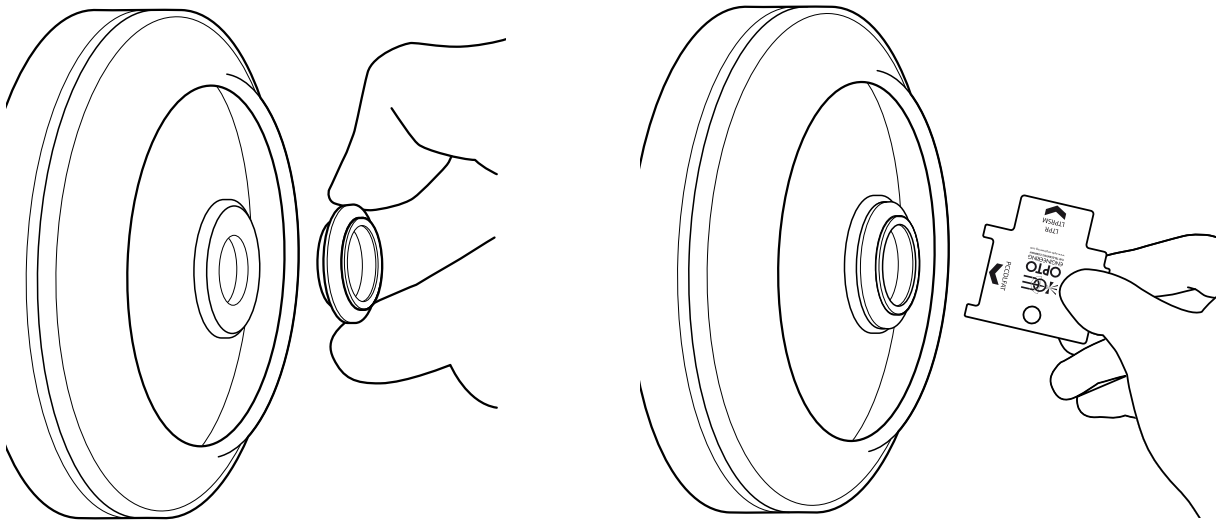

2 Screw PCCDLFAT in place using the provided PTTOOL.

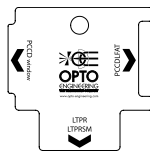

Use the provided PTTOOL instrument to remove/insert each component (the correct side is correspondingly labeled).



# PCCDLFAT assembling instructions

---